# ultra pure

## VISTA Ro 1225 GPD



### DELIVER EXTREMELY CLEAN WATER TO YOUR HUMIDIFICATION EQUIPMENT

UltraPure Systems Vista Reverse Osmosis Systems are completely contained in a sleek industrial grade cabinet with single point connections for ease of installation and placement virtually anywhere. Each unit has an integral 4-stage process to remove harmful substances, such as heavy metal ions and total dissolved solids from domestic water sources. This purification process will convert municipal water to a consistently higher purity level, suitable for multiple types of humidifiers.

Neatly packed in a sturdy 1/2" welded high density polyethylene plastic cabinet with hinged door makes this single point connection system ideal for small reverse osmosis applications. With our advanced system controller you can monitor City and RO water quality at a glance via the highly visible blue and red illumination on the front of the cabinet. BLUE indicating proper water quality and RED indicating an alarm condition, such as water quality level no longer within acceptable range.

For serving and protecting your process and equipment investment. Maintain and optimize your system's performance with our unique Query Code System. As a standard part of every system, this simple, friendly, powerful, no cost mobile application enables customers to manage routine filter maintenance from anywhere, including on-site or remotely.

#### BENEFITS

- Eliminate down time due to consumed filters (proactive vs. reactive)
- Stay ahead of the curve with automatically generated email notifications
- · Predictable data budgeting on annual filter costs
- · No binding contracts or licensing fees required

## ultra pure

### System Summary - UPS 1225

4 Stage Reverse Osmosis process. The final purity of the water leaving the RO System (NEW Filters) is between 10-40 PPM.

This Systems flow is rated at **1225 gpd** +/- 15% based on 77 degree water, 100 psi applied pressure. 500 ppm NaCI softened filtered water.

Feed Pressure	<b>Operating Temperature</b>	<b>Electrical Rating</b>	Amp Max	<b>Dry Weight</b>	Oper. Weight
60-125 psi	34 - 110° F	120 VAC/60Hz	MFS 20	<b>295 lbs</b>	290 lbs

#### Stage 1 : <u>Sediment Filter</u>

Engineered to expanded volume and higher flow rates for commercial applications such as equipment protection and water polishing. Each filter is pretested for maximum pressure and temperature.

Quantity Per Unit	1
Model Number	UPF_4283
Filter Dimensions	2.5" OD x 20" L
Rating	5 Micron
Max Operating Pressure	125 PSI
Operating Temperature	40 ° - 100 ° F

#### Features and Benefits:



• Protect equipment from hard water damage

RO 1225 GPD

- Hefty flow rates up to 7 gal/min
- Two piece bayonet style replacement
- Best cost to performance ratio in the industry

**Test Information**: Housings and fittings have been tested for performance to NSF Standard 42. Tests included Hyrdo Static Testing at 300 psig and Cycle Testing of 100,000 repetitions from 0 to 150 psig. Filters have been tested and listed under Standard 42 for odor, and chlorine reduction; or particulate reduction; or have been materials certified. All filters should be installed on cold water lines. **Note:** Activated carbon filters are not intended to be used where the water is micro-biologically unsafe or with water of unknown quality without adequate disinfection before or after the unit.

Warranty Information: Filters are warrantied to be free from any defects in workmanship or materials. Further, the warranty provided applies, only when used with the product specifications and service life, from the date of install or 5 years from the date of manufacture whichever occurs first, beyond which time or use Ultra Pure Systems is not for any use of the product.

## ultra pure

## VISTA Ro 1225 GPD

#### Stage 2 : Carbon Filters

Engineered to expanded volume and higher flow rates for commercial applications such as equipment protection and water polishing. Each filter is pretested for maximum pressure and temperature.

Quantity Per Unit	1
Model Number	UPS_4284
Filter Dimensions	4.5" OD x 20" L
Rating	10 Micron
Max Operating Pressure	125 PSI
<b>Operating Temperature</b>	40 ° - 100 ° F

#### Features and Benefits:

- Protect equipment from hard water damage
- Hefty flow rates up to 7 gal/min
- Two piece bayonet style replacement
- Best cost to performance ratio in the industry

**Test Information**: Housings and fittings have been tested for performance to NSF Standard 42. Tests included Hyrdo Static Testing at 300 psig and Cycle Testing of 100,000 repetitions from 0 to 150 psig. Filters have been tested and listed under Standard 42 for odor, and chlorine reduction; or particulate reduction; or have been materials certified. All filters should be installed on cold water lines. Note: Activated carbon filters are not intended to be used where the water is micro-biologically unsafe or with water of unknown quality without adequate disinfection before or after the unit.

Warranty Information: Filters are warrantied to be free from any defects in workmanship or materials. Further, the warranty provided applies, only when used with the product specifications and service life, from the date of install or 5 years from the date of manufacture whichever occurs first, beyond which time or use Ultra Pure Systems is not for any use of the product.

### Stage 3 : Membrane Filter

Polyamide thin-film composite membranes are one of the industry's most reliable and highest performing reverse osmosis elements. The high flow membranes are available in all standard commercial sizes and feature a protective ABS shell. Advanced membrane technology and manufacturing processes ensure high quality and performance.

Quantity Per Unit	2
Model Number	UPF_5298 & 5294
Filter Dimensions	4" 0D x 40" L + 21"
pH Range	2 - 11
Max Operating Pressure	600 PSI
<b>Operating Temperature</b>	40 ° - 113 ° F

#### Features and Benefits:

- Polyamide thin-film composite membrane
- Available in all standard commercial sizes
- Protective ABS hard shell
- Meets and exceeds NSF standards
- Half the operating pressure of standard high rejection membranes

Test Information: 550 TDS Filtered (5 Micron), De-chlorinated, Municipal Feed Water, 77°F, 15% Permeate Recovery, 6.5 - 7.0 pH range, at the specified operating pressure. Data taken after 30 minutes of operation. Maximum pressure drop for each element is 15 psi. Minimum salt rejection is 96%. Permeate flow for individual elements may vary +/- 20%.

#### **Stage 4 : Ultra Violet Light Sterilization OPTIONAL**

Optional UV Sterilizer can be added to each system. Water will pass through UV light as a last pass prior to going into water storage tank. UV Sterilizer is sized for system nominal capacity and pre wired integral of system. Blue LED light inside cabinet indicates UV light is on. Bulb and Sleeve replacement is recommended every 10,000hrs.

#### Product Water Storage Tank

ultra pure

RO permeate water storage tank, made of superior materials and meeting the stringent standards of NSF 58. At the heart of the tank is a 100% butyl rubber diaphragm that has been post cured to eliminate any unwanted odors. Combined with a polypropylene liner it keeps system water contained in a sealed water chamber.

Model Number	UPS-FC_120
Deliverable Capacity	86.7 Gallons
Dimensions	26" OD x 61" T
Connection Size	1 1/4" Male NPT
Weight	154lbs
Max Operating Pressure	125 PSI

#### **Features and Benefits:**

- Discharges in any position
- Exceeds NSF and ANSI standards
- Polypropylene Liner
- Cold Rolled Steel w/polyurethane finish
- Environmentally safe, 100% lead-free
- 100% seamless composite construction











## VISTA Ro 1225 GPD

#### John Guest LLDPE Tubing

The John Guest PE range of plastic tubing is produced in Linear Low Density Polyethylene (LLDPE) for cold and intermittent hot water applications. The tubing provides the benefits of a wide range of temperature and pressure suitability, broad chemical compatibility and is made from non contaminating materials. LLDPE is more robust than traditional low or medium density polyethylene and is recommended for use with cold and intermittent hot water. The tubing is made from FDA compliant materials and is NSF International certified.

Tube Tolerances		1/4"-1/2":+0.001/-0.004		
Max Temperature		150°F		
Tube Dimensions		1/4" OD - 0.170" ID		
Tube Dimensions		1/2" OD - 0.375ID		
Weight		2lbs 1.1oz		
<b>Conversion Factor</b>		NaCI (avg 0.5)		
Internal Tubing Color Key				
Yellow	Blue		Black	
Incoming City	Reverse Osmosis		Reject	

#### Features and Benefits:



- FDA compliant materials
- Broad chemical compatibility
- Made from all non-contaminating materials
- Stronger than standard polyethylene tubing
- NSF International certified.



#### John Guest "push-fit" Fittings

John Guest fittings are manufactured in gray and black acetal copolymer with RED safety clips attached to each fitting.

Standard Sizes	1/4" 1/2"
<b>Max Pressure</b> <sup>3</sup> / <sub>16</sub> " - <sup>5</sup> / <sub>16</sub> "	232psi
<b>Max Pressure</b> $\frac{3}{8}$ " - $\frac{1}{2}$ "	145psi
Max Temperatures	-2° - 149° F



- Push-fit technology
- Suitable for soft metal or plastic tubes
- Suitable for air or inert gases
- Superior flow characteristics
- Quick disconnection without the need for tools



## VISTA Ro 1225 GPD

#### Advanced System Controller

The on board Ultra Pure Systems advanced system controller provides high-end RO control features in a compact, economical package. Outfitted with a dedicated high pressure switch input, alarm relay output and a large hinged UL certified enclosure to accommodate motor contactors, disconnects and fuse blocks the controller provides precise performance with less hassle. Developed with reliability and quality and reliability in mind the advanced system controller offers best in class controls sophistication not found in other entry level RO controllers.

Inlet pressure switch	Normally-Open
Pretreat lockout	Normally-Open
Dimensions	10"W x 7"D x 12"L
Power Supply	120v
Permeate Conductivity	0-1500* PPM, 0-3000 µs
Feed Conductivity	0-3000* PPM, 0-6000 µs
Amperage	MFS 20A - MCA 17.5A - SCCR

#### Features and Benefits:

- Common sense interface with 4 line bright LCD
- Fully fused at international standards
- Power supply operates on varying voltages
- Stationary high current wiring

#### Motor

Ultra Pure Vista 5000 GPD system comes equipped with a NEMA 56J motor in open drip proof case attached to a high pressure booster pump. Centrifugal pump design permits selection of flow within a range. Factory tested to 100psig. Field adjustments may be required due to unknown local city pressure. 230v/1ø operation required for motor operation.

Motor Specifications		
Power Output	1 HP	
Voltage	230v 1ø/60Hz	
RPM Range	1701 -1800	
Pump Specifications		
Max Operating Pressure	230 psi/up to 16 bar	
Inlet/Outlet Port Size	1/2" NPT	
Flow Rate	18 to 140 GPH at 1725 rpm	

#### Motor Features and Benefits:

- Low amp draw design for 230V/1ø/60Hz operation
- UL recognized and CSA Certified
- High starting and breakdown torque
- Continuous duty at nameplate ratings

#### Pump Features and Benefits:

- AISI 303 Stainless steel housing and rotor
- Carbon graphite pumping chamber and vanes
- Direct-drive motor and pump integral of system

## ultra pure SYSTEMS

### VISTA Ro 1225 GPD

#### Advanced System Controller

The on board Ultra Pure Systems advanced system controller provides high-end RO control features in a compact, economical package. Outfitted with a dedicated high pressure switch input, alarm relay output and a large hinged UL certified enclosure to accommodate motor contactor, disconnects and fuse blocks the controller provides precise performance with less hassle. Developed with reliability and quality and reliability in mind the advanced system controller offers best in class controls sophistication not found in other entry level RO controllers.

Inlet pressure switch	Normally-Open
Pretreat lockout	Normally-Open
Dimensions	10"W x 7"D x 12"L
Power Supply	120VAC, 60Hz
Permeate Conductivity	0-1500* PPM, 0-3000 µs
Feed Conductivity	0-3000* PPM, 0-6000 µs
Amperage	MFS 20A - MCA 16A - SCCR 5KA

#### Features and Benefits:

- Simple interface with 4 line bright LCD
- Fully fused at international standards
- Power supply operates on varying voltages
- Stationary high current wiring
- UL Listed



Ultra Pure 1225 GPD system comes equipped with a rigid-base split-phase motor used for hub-mounted pump applications, including liquid transfer pump. An extended hub allows a brass rotary vane pump to be direct-mounted to the motor via a stainless steel clamp. Auto thermal protection helps prevent pump damage from overheating. The direct-mounted volumetric pump is specifically designed for pumping water and aggressive liquids with low flow at high pressure. The pump housing and rotor are Brass while the pumping chamber and vanes are graphitic carbon.

Motor Specifications		
Power Output 3/4 HP		
Voltage	120vac	
RPM Range	1701 -1800	
Pump Specifications		
Max Operating Pressure	230 psi/up to 16 bar	
Inlet/Outlet Port Size	1/2" NPT	
Flow Rate	18 to 140 GPH at 1725 rpm	

### Motor Features and Benefits:


- Low amp draw design for 115V/60Hz operation
- UL recognized and CSA Certified
- High starting and breakdown torque
- Continuous duty at nameplate ratings

### Pump Features and Benefits:

- AISI Brass housing and rotor
- Carbon graphite pumping chamber and vanes
- Direct-mounted motor connection via SS clamp

#### (800) 729-5192

#### WWW.ultrapureus.com US Patent # D780, 884 ; D780,885

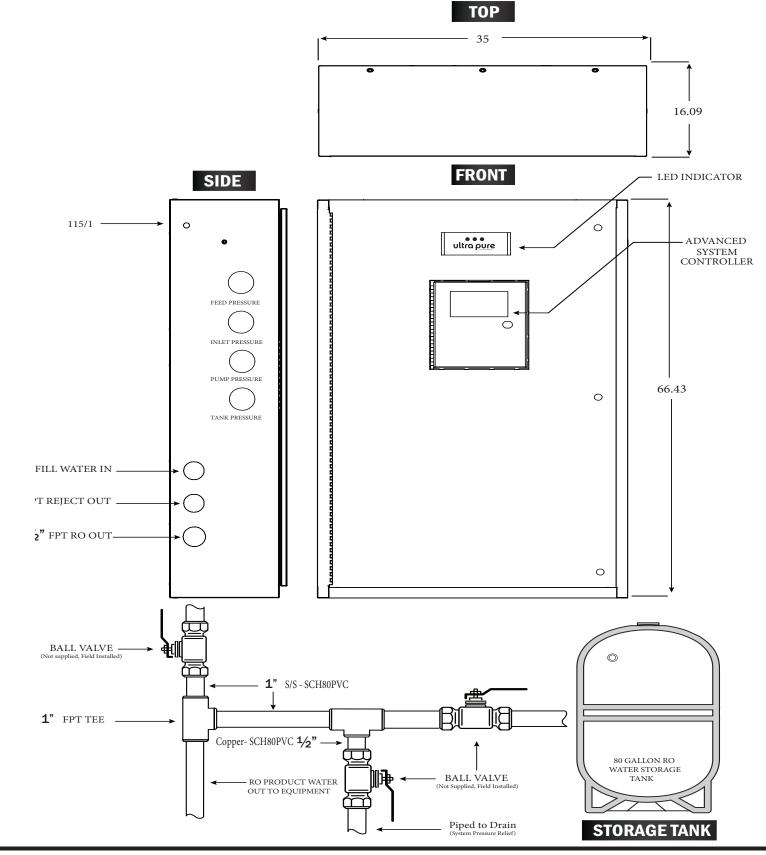

## ultropure systems

## VISTA RO 1225 GPD